



## **OPERATING INSTRUCTIONS**

# **Zero Speed Hall Effect Sensor F12S**



	Typo #	Product #	Drawing #		
	Type # F12S	385Z-05331	Drawing # 113624 Rev.3		
	1 120	10002 00001	1100211101.0		
General					
Function	ferrous pole wheel, speeds. They exhib	for generating square wave it a static function, whereby	suitable, in conjunction with a signals proportional to rotary pulse generation down to 0 Hz t of rotational mounting angle.		
Technical data					
Supply voltage	825 VDC				
Current consumption	Max. 12 mA (withou	ut load)			
Signal output		d to supply (negative pole = x. 25 mA voltage	with internal 2.7 kOhm pull-up reference Voltage).		
Frequency range	0 Hz15 kHz				
Housing	M12x1, tightening to Maximum pressure request)	orque: max. 12 Nm on front surface: <b>100 bar</b> (o	ther pressure values upon		
Connection	casing, fire retardar = 4.8 mm, min. ben	n2 (AWG22), stranded wires nt, low smoke, RoHS conform	, elastomer isolation, green m and halogen free, max. outer and 50 mm (dynamic), cable		
Protection	Sensor head: IP68 Cable outlet: IP67				
Insulation	Housing and electro	onics galvanically isolated (T	est: 500 V, 50 Hz for 1 minute)		
Pole wheel	Prerequisite: Tooth Optimal performand Involute gear Tooth width > 10 Side offset < 0.2 Eccentricity < 0.2	mm mm	al (e.g. Steel 1.0036).		
Air gap between sensor and pole wheel	<ul> <li>Module 1.0 (DP 25.4): 0.30.5 mm</li> <li>Module 2.0 (DP 12.7): 0.31.5 mm</li> </ul>				
Electromagnetic compatibility (EMC)	Please contact Jaq	uet for further details.			
Vibration & shock immunity	Jaquet Greenline sensors are approved for rough environments. Please contact Jaquet for further details.				
Operating temperature	-40℃125℃				

Last change by: RW, 01.10.2012	Checked by: WH, 04.10.2012	Document status: APPROVED	Document Nr.: 117793	Document Revision: 002
www.jaquet.com	n info@jaqu	et.com	Tel.: +41 61 306 88 22	Page 1/4



# IN CHARGE OF SPEED


## **OPERATING INSTRUCTIONS**

<b>Further Information</b>					
Safety	All mechanical installations must be carried out by an expert. General safety requirements have to be met.				
Installation	The sensor has to be aligned to the pole wheel according to the sensor drawing independent of its rotational orientation. Deviations in positioning may affect the performance and decrease the noise immunity of the sensor. During installation, the smallest possible pole wheel to sensor gap should be set. The gap should however be set to prevent the face of the sensor ever touching the pole wheel. Within the air gap specified the amplitude of the output signal is not influenced by the air gap.  A sensor should be mounted with the middle of the face side over the middle of the pole wheel. Dependent upon the wheel width, a certain degree of axial movement is permissible. However, the middle of the sensor must be at minimum in a distance of 3 mm from the edge of the pole wheel under all operating conditions.  A solid and vibration free mounting of the sensor is important. Eventual sensor vibration relative to the pole wheel can induce additional output pulses. The sensors are insensitive to oil, grease etc. and can be installed in arduous conditions.				
Maintenance	Product cannot be repaired.				
Transport	Product must be handled with care to prevent damage of the front face.				
Storage	Product must be stored in dry conditions. The storage temperature corresponds to the operation temperature.				
Disposal	Product must be disposed of properly, it must not be disposed as domestic waste.				
<b>Further Information</b>					
Safety	All mechanical installations must be carried out by an expert. General safety requirements have to be met.				
Connection	Sensor wires are susceptible to radiated noise. Therefore, the following points have to be considered when connecting a sensor:  The sensor wires must be laid as far as possible from large electrical machines. They must not run parallel in the vicinity of power cables.  The maximum permissible cable length is dependent upon the sensor voltage, the cable routing, along with cable capacitance and inductance. However, it is advantageous to keep the distance between sensor and instrument as short as possible. The sensor cable may be lengthened via a terminal box located in an IP20 connection area in accordance with EN 60529.				
Installation	The sensor has to be aligned to the pole wheel according to the sensor drawing independent of its rotational orientation. Deviations in positioning may affect the performance and decrease the noise immunity of the sensor. During installation, the smallest possible pole wheel to sensor gap should be set. The gap should however be set to prevent the face of the sensor ever touching the pole wheel. Within the air gap specified the amplitude of the output signal is not influenced by the air gap.  A sensor should be mounted with the middle of the face side over the middle of the pole wheel. Dependent upon the wheel width, a certain degree of axial movement is permissible. However, the middle of the sensor must be at minimum in a distance of 3 mm from the edge of the pole wheel under all operating conditions.  A solid and vibration free mounting of the sensor is important. Eventual sensor vibration relative to the pole wheel can induce additional output pulses.  The sensors are insensitive to oil, grease etc. and can be installed in arduous conditions. Within the air gap specified the amplitude of the output signals is not influenced by the air gap.				
Maintenance	Product cannot be repaired.				
Transport	Product must be handled with care to prevent damage of the front face.				
Storage	Product must be stored in dry conditions. The storage temperature corresponds to the operation temperature.				
Disposal	Product must be disposed of properly, it must not be disposed as domestic waste.				

Last change by:	Checked by:	Document status:	Document Nr.:	Document Revision: 002
RW, 01.10.2012	WH, 04.10.2012	APPROVED	117793	
www.jaquet.com	n info@jaqu	et.com	Tel.: +41 61 306 88 22	Page 2/4



#### **OPERATING INSTRUCTIONS**

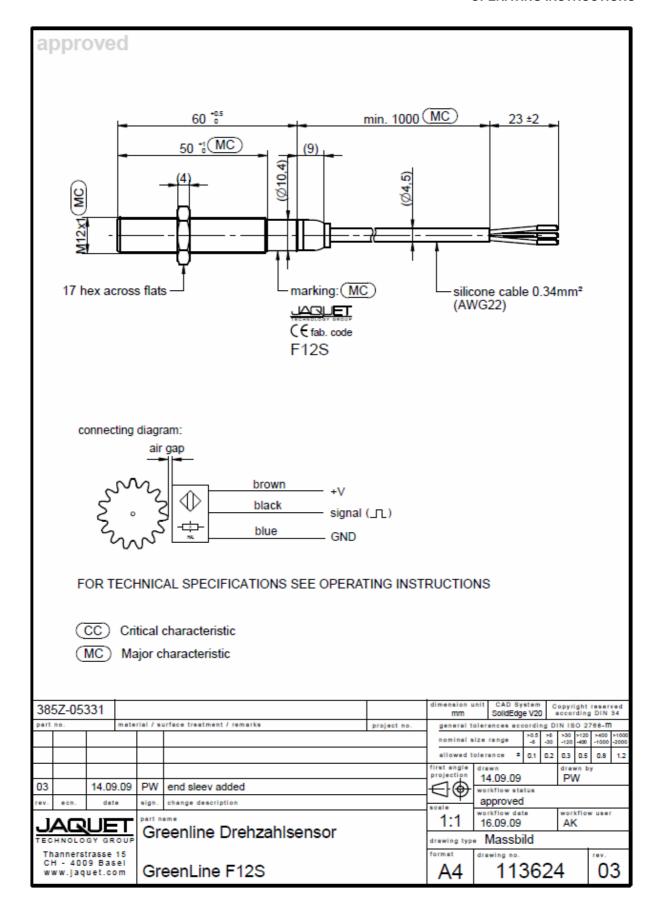

Last change by:	Checked by:	Document status:	Document Nr.:	Document Revision:
RW. 01.10.2012	WH. 04.10.2012	APPROVED	117793	002
www.jaquet.con			l.: +41 61 306 88 22	Page 3/4

# COMPANY PROFILE







- Automotive and truck
- Diesel / Gas engines
- Hydraulics
- Railway
- Turbines
- Turbochargers
- Industrial machinery

#### PRODUCTS - SPEED SENSORS

- Various technologies
- Standard, custom and OEM models
- For demanding applications, e.g. 300,000 rpm, temperature up to 320 °C / 600 °F, high vibration, shock to 200 g, etc.
- GreenLine speed sensors for general applications
- Ex models for hazardous areas
- Pole bands and target wheels available where needed

#### PRODUCTS - SYSTEMS

- Multi-channel overspeed protection systems
- 1–2 channel measurement, protection and control modules
- Engine diagnostic systems
- Redundant speed measurement and indication

### SPECIAL PROJECT EXAMPLES

- An automotive linear movement sensor
- Integrated power and torque measurement for display and gearbox control
- Naval spec. turbine protection for nuclear submarines
- Speed measurement in turreted, tracked vehicles

#### QUALITY MANAGEMENT AND STANDARDS

- Quality management: TS 16949 and ISO 9001, ZELM ATEX 1020, KWU
- Sensors: GL, KWU, TÜV, ATEX, EN 50155, NF F 16-101 102, ABS, EMC
- Systems: IEC 61508 SIL 2 and SIL 3, API 670, GL, TÜV, KWU, EX
- Environmental: RoHS EU directive 2002/95/EC

#### JAQUET - YOUR PARTNER

- Efficient and professional service JAQUET TECHNOLOGY GROUP is headquartered in Basel, Switzerland and has subsidiaries in Belgium, China, Germany, the Netherlands, United Kingdom and United States along with a worldwide distributor and enduser service network.
- Flexible production quantities; from 1 to millions per project
- Reduction of total costs by intelligent and cost-effective solutions
- Fast turn around time











